
4. Electrical Component Location

A: LOCATION

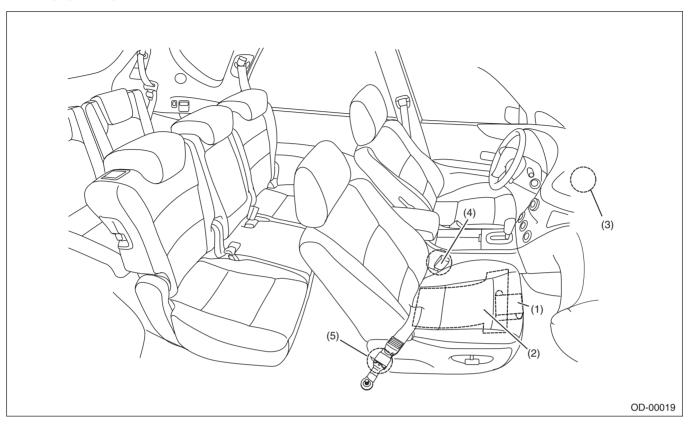

- (1) Occupant detection control module
- (2) Occupant detection sensor
- (3) Airbag ON/OFF indicator light (Warning box)
- (4) Buckle switch (Passenger's seat)
- (5) Seat belt tension sensor

